


GET STARTED

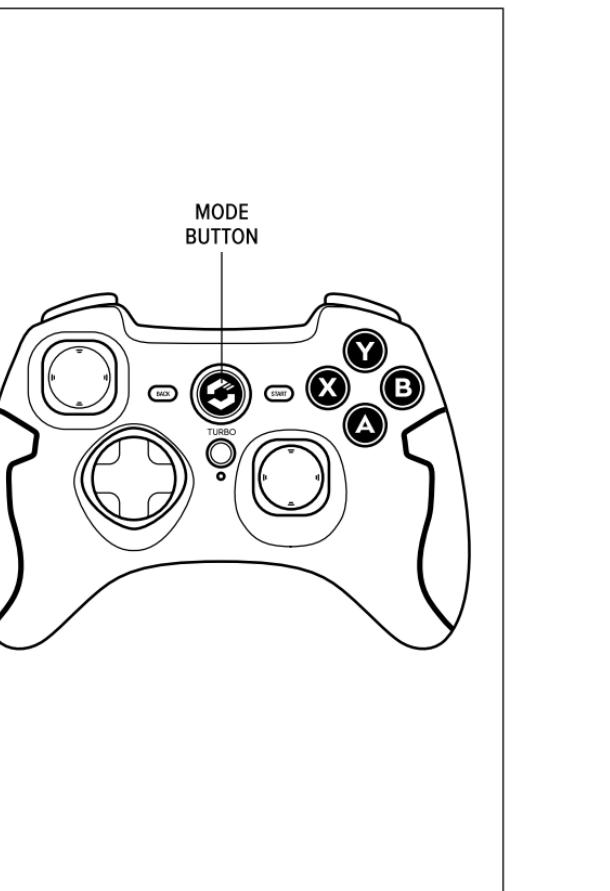

DOWNLOAD THE SOFTWARE AT:
www.speedlink.com

EN

1. CHARGING

First, charge the gamepad. Using the mini-USB cable, connect it to any free USB port on your PC, console or other USB power source (min. 500mA). The gamepad's LED ring will flash during charging which takes up to 3 hours. Please be aware that the initial charge may take a little longer. As soon as the LED ring stays lit, charging is complete and you can disconnect the cable.

2. DRIVER INSTALLATION (PC)

To use the gamepad on the PC, download the latest driver version from the Speedlink website at www.speedlink.com.

3. CONNECTING

Plug the USB receiver into any free USB port on your PC or PS3*. The device will be detected automatically and ready to use in just a few seconds.

4. WIRELESS CONNECTION

Keep the Mode button held pressed for three seconds to switch the gamepad on. The gamepad's LED ring will then start to flash. If using the gamepad for the first time, press the button again briefly to establish the connection to the PC or console – make sure the gamepad is close to the receiver. The connection process takes a few seconds, but once done the connection is established automatically when you switch on the gamepad in future.

5. XINPUT AND DIRECTINPUT*

To switch between the gamepad's two operating modes, keep the Mode button held pressed for 3 seconds. In XInput mode, the LED under the Turbo button will be lit; in DirectInput mode it will not be lit. Be sure to set the gamepad to the correct mode before starting the game. Switching during gameplay may stop the game identifying the controller correctly – if this happens, restart the game. For example, you can consult the manual that accompanied the game or ask the publisher to establish which mode works the best.

DE

6. D-PAD MODE

If using with a PC, press the Mode button briefly in DirectInput* mode to switch between the two D-pad modes. If the upper left LED (LED ring) is lit, coolie hat mode is active; if the LED is not lit, the D-pad will control the axes of the left analogue stick and the right analogue stick will take over button functions 1 to 4.

7. RAPID-FIRE FUNCTION

The rapid fire function allows a button to fire multiple times in rapid succession when pressed. To activate this function, press and hold the Turbo button and press the button you want to assign this function to. In rapid fire mode, the LED below the Turbo button will flash.

8. SETTINGS

On the PC, you can check the gamepad functions in the Windows® Control Panel under 'Devices and Printers'. You will also find the options here for the vibration function in DirectInput* mode; for XInput games, configure the vibration functions in the game's settings. Please note, vibration functions only work if supported by the game.

9. STANDBY MODE

After five minutes of inactivity (or after 30 seconds without wireless connection), the gamepad will switch to standby mode; press the Mode button to reactivate it. If the gamepad's upper right LED starts to flash while in use, recharge it. You can charge and game at the same time.

NOTES:

Press the Mode button to access the Home Menu on the PS3*. Be aware, you can't switch the console on using this button.

Some PS3* games offer optional motion sensor control functionality for which you need a special gamepad. To ensure you maintain maximum control when using the TORID, deactivate the relevant option in the game's options menu.

DE

1. AUFLADEN

Lade das Gamepad zunächst auf, indem du es über das Mini-USB-Kabel mit einer freien USB-Schnittstelle des PCs, der Konsole oder einer anderen USB-Stromquelle (mindestens 500 mA) verbindest. Der LED-Ring am Gamepad blinkt während des Ladevorgangs, der bis zu 3 Stunden dauert. Bitte beachte, dass der erste Ladevorgang etwas mehr Zeit beanspruchen kann. Sobald der LED-Ring konstant leuchtet, ist das Aufladen beendet und du kannst die Kabelverbindung trennen.

2. TREIBERINSTALLATION (PC)

Um das Gamepad am PC zu verwenden, lade bitte die aktuelle Treiberversion auf der Speedlink-Website unter www.speedlink.com herunter.

3. ANSCHLUSS

Verbinde den USB-Empfänger mit einem freien USB-Anschluss deines PCs oder deiner PS3*. Das Gerät wird automatisch erkannt und ist nach wenigen Sekunden einsatzbereit.

8. EINSTELLUNGEN

Am PC kannst du die Funktion des Gamepads in der Windows®-Systemsteuerung im Abschnitt „Geräte und Drucker“ prüfen. Im DirectInput*-Modus findest du dort auch die Optionen für die Vibrationsfunktion; Vibrationen für XInput-Titel konfigurierst du in den jeweiligen Spieloptionen. Bitte beachte, dass Vibrationen nur dann wiedergegeben werden, wenn ein Spiel diese nutzt.

9. STANDBY-MODUS

Das Gamepad wechselt nach fünf Minuten Inaktivität in den Standby-Modus (nach 30 Sekunden ohne hergestellte Funkverbindung). Drücke dann die „Mode“-Taste, um es zu reaktivieren. Beginnt die obere rechte LED am Gamepad zu blinken, sollte es aufgeladen werden. Gleichzeitiges Aufladen und Spielen ist möglich.

HINWEISE:

Mit der „Mode“-Taste rufst du das Hauptmenü der PS3* auf.

Beachte, dass sich die Konsole mit dieser Taste nicht einschalten lässt.

Einige PS3*-Spiele bieten eine optionale Steuerung über Bewegungssensoren an, die ein spezielles Gamepad benötigt.

Deaktiviere diese Funktion in den Optionen, um eine optimale Steuerung mit TORID zu gewährleisten.

speedlink

www.speedlink.com

SL-6576-BK-02 // V4

VER. 1.2

WARNING SYMBOLS AND MARKINGS

 Li-ion battery.
Further information: www.speedlink.com

 Li-ion-Batterie.
Weitere Informationen: www.speedlink.com

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS



Please note that the failure to observe these instructions can cause product damage, explosion, fire and/or electric shocks!

- Only use this device as indicated in the user guide. Do not open or repair it.
- Do not expose the device to liquids, heat or cold.
- Do not use the device in a damp environment. Clean the device with a dry cloth.
- Keep the device and all loose parts away from children, pets and unauthorized persons.
- Only use the device with the appropriate provided USB charging cable and with a USB-A port.
- Disconnect the charging cable from the device if it will not be used for a long time. When disconnecting the cable, don't pull on the cord but on the plug.
- Don't use the cables in any way other than mentioned in the user guide; don't bend, cut, extend, knot or step on them.
- Do not insert any foreign objects into the openings of the device.
- If the device is damaged in any way or gets too hot, stop using it immediately.
- Take caution when using the device if you have a pacemaker or are dependent on other sensitive electronic life aids, as the device emits radio signals.

WICHTIGE SICHERHEITSHINWEISE



Die Nichtbeachtung dieser Hinweise kann zu Schäden am Produkt, Explosionen, Feuer oder elektrischen Schocks führen!

- Produkt nur entsprechend der Gebrauchsanleitung verwenden. Nicht öffnen oder reparieren.
- Produkt keinen Flüssigkeiten, Hitze oder Kälte aussetzen.
- Produkt nicht in einer feuchten Umgebung nutzen. Mit einem trockenen Tuch reinigen.
- Produkt und alle losen Teile von Kindern, Haustieren und unbefugten Personen fernhalten.
- Produkt nur mit dem mitgelieferten USB-Ladekabel und an einem USB-Anschluss des Typs A aufladen.
- Ladekabel vom Produkt abziehen, wenn das Produkt längere Zeit nicht verwendet wird. Beim Abziehen nicht am Kabel, sondern am Stecker ziehen.
- Kabel nur gemäß Gebrauchsanleitung verwenden; nicht knicken, verlängern oder verknoten; nicht einschneiden oder darauf treten.
- Keine fremden Objekte in die Öffnungen des Produktes einführen.
- Bei Beschädigung oder Überhitzung des Produktes sofort die Benutzung abbrechen.
- Vorsicht bei Abhängigkeit von Herzschrittmachern oder anderen empfindlichen elektronischen Lebenshilfen, da das Produkt Funksignale aussendet.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.




INFORMATION

IMPORTER/MANUFACTURER:

Jöllenbeck GmbH
Kreuzberg 2
27404 Weertzen
GERMANY
Phone: (+49) 4287 9244-0

PRODUCT DETAILS:

Product no.: SL-6576-BK-02
Type description: TORID Wireless Gamepad, black
Further information: www.speedlink.com

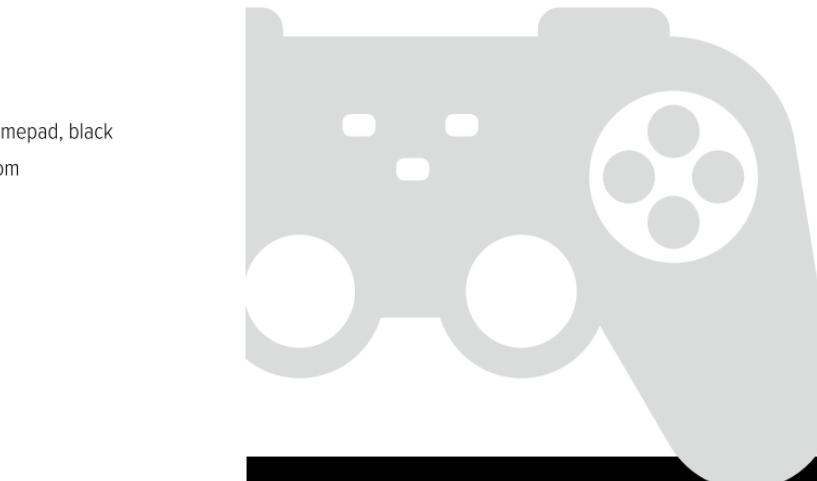

MANUAL



© 2020 Jöllenbeck GmbH. All rights reserved. Speedlink, the Speedlink word mark and the Speedlink swoosh are registered trademarks of Jöllenbeck GmbH.

* Windows and DirectInput are registered trademarks of Microsoft Corporation in the United States and other countries.

PS3 is a registered trademark of Sony Computer Entertainment Inc.

The Instagram logo is a registered trademark/service mark of Instagram LLC.

The Facebook logo is a registered trademark of Facebook Inc.

The Twitter logo is a registered trademark of Twitter Inc.

The YouTube logo is a registered trademark of YouTube LLC.

All trademarks are the property of their respective owner.

Jöllenbeck GmbH shall not be liable for any errors that may appear in this manual. Information contained herein is subject to change without prior notice. Please keep this information for later reference.

TORID
WIRELESS GAMEPAD

